

Technical Data Sheet

Pressure / Temperature / Humidity / Air Velocity / Airflow / Sound level

Hotwire thermo-anemometer

VT 110 – VT 115

KEY POINTS

- Easy to use

- Adjustable backlight

- Automatic average

- Hold-min-max functions

- Selection of units

- Debit calculation

TECHNICALS FEATURES

Measuring element Hotwire air velocity: thermistance with a negative

temperature coefficient.

Ambient temperature : NTC sensor

Display 4 lines, LCD technology. Sizes 50 x 36 mm.

2 lines of 5 digits with 7 segments (value)
2 lines de 5 digits with 16 segments (unit)

Probes VT 110 : Stainless hotwire probe

VT 115: Telescopic hotwire probe bent at 90°

Cable Straight, lenght : 2 m

Housing ABS, protection IP54

Keypad 5 keys

Conformity Directives EMC 2014/30/EU and EN 61010-1

Power supply 4 batteries AAA LR03 1.5 V

Battery life 180 hours
Ambience Neutral gas

Operating temperature (instrument)

Operating temperature (probe)

From 0 to +50 °C

From 0 to +50 °C

Storage temperature From -20 to +80 °C

Auto shut-off Adjustable from 0 to 120 min

Weight 250 g

SPECIFICATIONS

	Measuring units	Measuring range	Accuracy ¹	Resolution
Velocity (hotwire)				
	m/s, fpm, km/h		From 0.15 to 3 m/s : ± 3% of	0.01 m/s
			reading \pm 0.05 m/s From 3.1 to 30 m/s : \pm 3% of reading \pm 0.2 m/s	0.1 m/s
Airflow				
	m³/h, cfm, l/s, m³/s	From 0 to 99 999 m³/h	$\pm 3\%$ of reading ± 0.03 x area (cm²)	1 m³/h
Temperature				
	°C, °F	From -20 to +80 °C	± 0.3% of reading ± 0.25 °C	0.1 °C




FUNCTIONS

- Airflow calculation
- · Airflow calculation with cone
- Selection of units (air velocity, airflow and temperature)
- Hold function
- Display of minimum and maximum values
- · Adjustable auto shut-off
- · Backlight
- Airflow detection
- Selection of cone
- Dimensions of rectangular and circular duct
- Automatic average
- Air velocity compensation in atmospheric pressure

OPERATING PRINCIPLES

Hotwire anemometer

A wire is continuously heated at a superior temperature than ambient and continuously cooled by airflow. Constant temperature is maintained by a regulation circuit. The heating current is proportional to the airflow velocity.

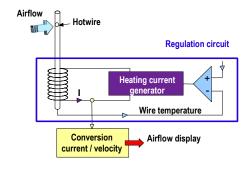

Thermometer: CTN probe

Probes with a negative temperature coefficient are thermistors with a resistance that decreases with the temperature, according to the equation below:

$$R_{(T)} = R_{(T0)} e^{-(\frac{\alpha}{100} x (T_0 + 273.15)^2 x (\frac{1}{T + 273.5} - \frac{1}{T_0 + 273.5}))}$$

RT= resistance sensor value at temperature T

 $R(T_0)$ = resistance value of the temperature sensor at reference T_0

T and T₀ in °C

 α and T₀ sensor specific constants

SUPPLIED WITH

Instruments are supplied with:

- VT 110 : Straight hotwire probe
- VT 115 : Telescopic hotwire probe bent at 90°
- Calibration certificate*
- Transport case (ref : ST 110)



*Except class 110 S

ACCESSORIES

CQ 15: Magnetic protective housing



K35 - 75 - 120 - 150:

Airflow cone



MT 51 : ABS transport

case



MAINTENANCE

We carry out calibration, adjustment and maintenance of your instruments to guarantee a constant level of quality of your measurements. As part of Quality Assurance Standards, we recommend you to carry out a yearly checking.

GUARANTEE

Instruments have 1-year guarantee for any manufacturing defect (return to our After-Sales Service required for appraisal).

Distributed by:

e-mail: export@kimo.fr